


Audio Equipment




Transmitter

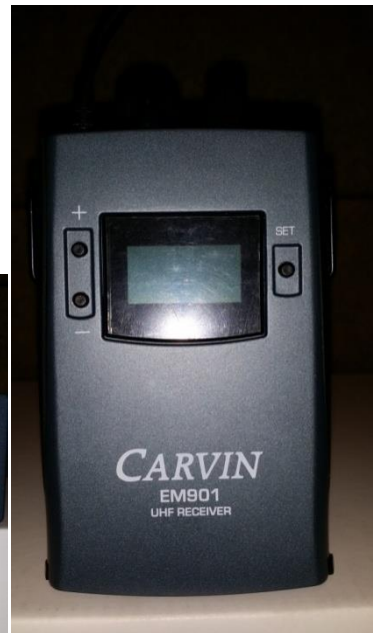


Receiver

To Setup a Transmitters and/or Receivers follow this process. There are 4 settings that will have to be setup/verify on the Transmitter and/or; Frequency, Group, Channel and Stereo/Mono. The Frequency will be set by the Group and Channel that is selected, no action is required other than to verify the Frequency on the Transmitter matches the Frequency on the Receiver. These setting will have to match the settings from the Transmitter and/or Receiver that is being replaced. Below is a definition of the settings as they appear on the Transmitter and Receiver Screen.

Transmitter

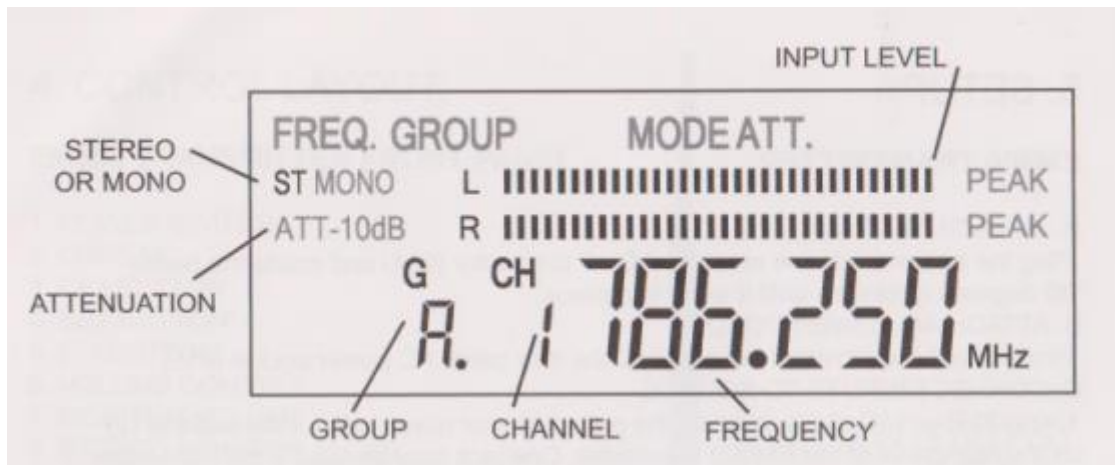

Receiver

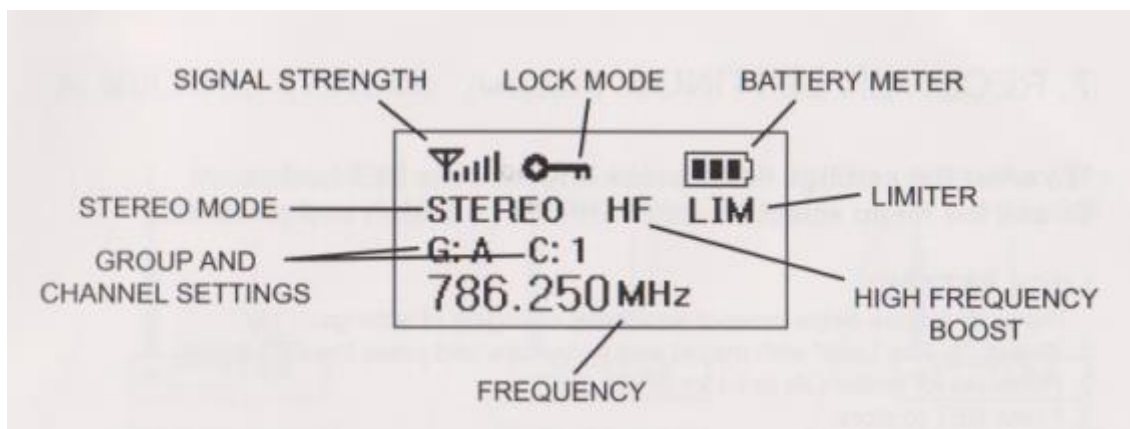

Transmitter Configuration

- Step 1:** Power up the Transmitter.
- Step 2:** Hold in the Set Button until the FREQ, in upper left corner, flashes.
- Step 3:** Hit the Set Button once and the Group G will flash.
- Step 4:** Hit the + or - Button until you get to the desired Group.
- Step 5:** Hit the Set Button once and the Channel CH will flash.
- Step 6:** Hit the + or - Button until you get to the desired Channel.
- Step 7:** Hit the Set Button 4 times and Store will flash on the screen.
- Step 8:** Hold in the Set Button until the FREQ, in upper left corner, flashes.
- Step 9:** Hit the Set Button 3 times and the Stereo setting will be displayed.
- Step 10:** The factory default is Stereo, hit the - Button and Mono will be displayed.
- Step 11:** Hit the Set Button and the setting will be displayed and saved.
- Step 12:** Verify the Frequency and the other setting against the Receiver to be paired with the Transmitter.

Receiver Configuration


- Step 1:** Power up the Transmitter.

- Step 2:** Hold in the Set Button until the Menu is displayed.
- Step 3:** Hit the – Button once to go to 2 Group/Channel.
- Step 4:** Hit the Set Button and the Channel C will flash.
- Step 5:** Hit the + or – Button until you get to the desired Group.
- Step 6:** Hit the Set Button once and the Channel CH will flash.
- Step 7:** Hit the Set Button and the Save option will appear, hit the + button to save or the – to disregard the change.
- Step 8:** Hit the – Button once to go to 3 Stereo/Mono.
- Step 9:** The factory default is Stereo, hit the – Button and Mono will be checked. Hit the Set Button and the Menu will be displayed.
- Step 10:** Hit the – Button 6 times to go to 9 Exit.
- Step 11:** Hit the Set Button and the settings will be displayed.
- Step 12:** Verify the Frequency and the other setting against the Transmitter to be paired with the Receiver.


Audio Cable



1. The 'Black' 3.5mm connects to the 'Green' speaker output on the back of the direct sort computer, see **RED ARROW** below.

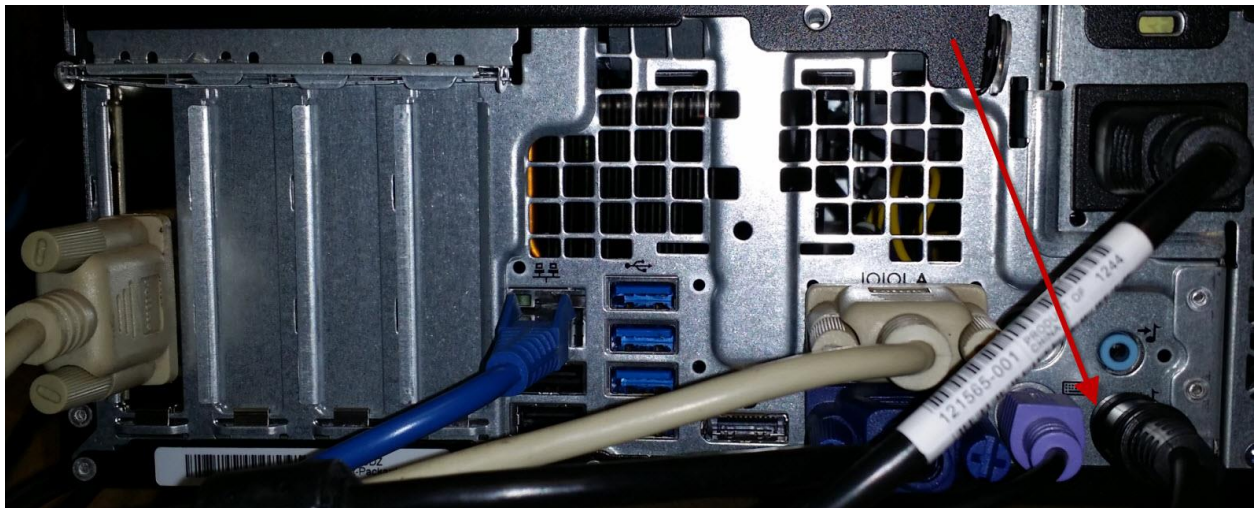

2. The 'Black' ¼ plug connects into the CH. 1 IN on the Carvin Unit setup as Ch. 1 is LEFT in the computer setup.
3. The 'Red' ¼ plug connects into the RIGHT/CH. 2 IN on the Carvin Unit setup as Ch. 2.

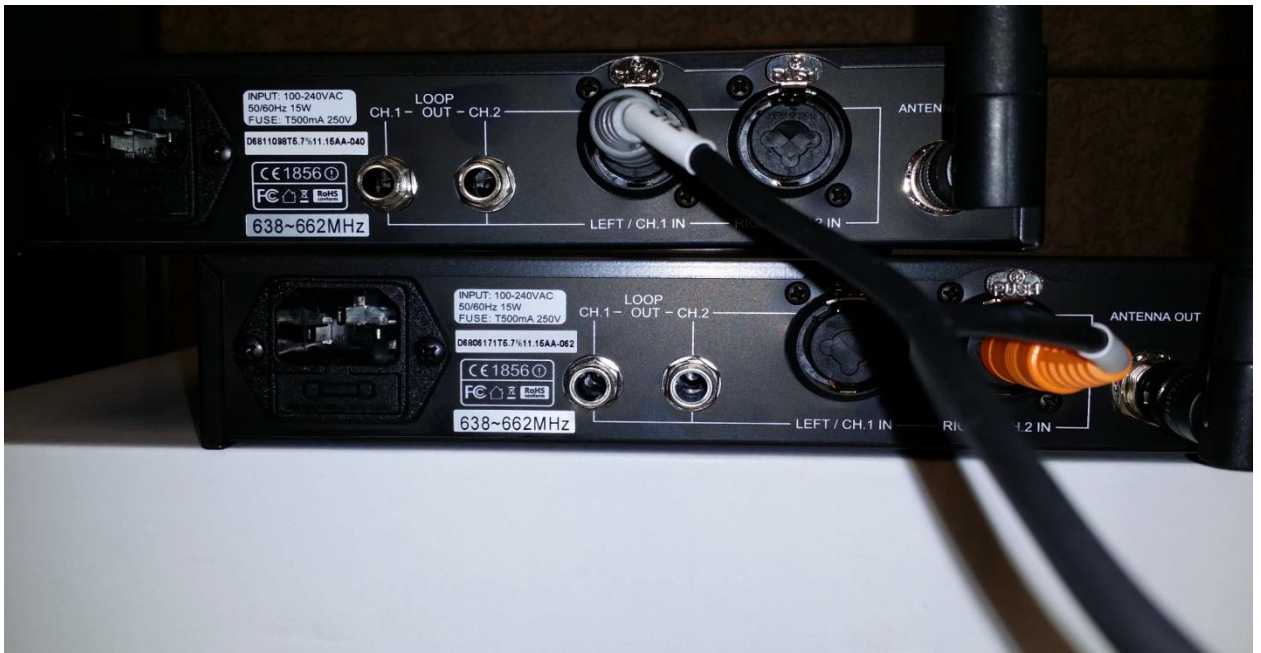

6+